



WHT/BLK
WHT/BRN

GRN

RED
RED
BRN
BLK
GRY
WHT/BLK
WHT
GRN
WHT/BRN
YEL
PUR

BLK
GRN
RED
BRN
BLK
RED

RED
YEL
RED
YEL
RED
BLK

BLK
BLK
BLK
BLK

BLK
BLK
BLK
BLK

BLK
BLK
BLK
BLK

BLK
BLK
BLK
BLK

Kill Switch
Key Switch
Tach
Rev. Limiter
Trim Switch
15A Breaker
15A Breaker
Clutch Switch
Starter Solenoid
STARTER
Regulator/Rectifier
Battery Switch
12V Battery
Alternator
Sparkplugs
Diodes
Armatures

Notes: Additional Wire: Brown Jumper from Choke and Ground
4350 Rpm for 4000
5100 Rpm for 5000 & 6000

Legend:
PUR • PURPLE
GRN • GREEN
YEL • YELLOW
BRN • BROWN
BLU • BLUE
BLK • BLACK
WHT • WHITE
ORG • ORANGE
GRY • GRAY
WHT/BRN • WHITE/BROWN
WHT/BLK • WHITE/BLACK

Important: I am not responsible for loss or damage due to the use or misinterpretation of this diagram!!!

Wiring Diagram
Scale: N/A
Date: 9/30/08
Rev: 10/14/08

Trim Actuator
Electric Clutch
Oil Pet Switch

Remote Control Panel
Rev. Limiter
Trim Switch
15A Breaker
15A Breaker
Clutch Switch
Starter Solenoid
STARTER
Regulator/Rectifier
Battery Switch
12V Battery
Alternator
Sparkplugs
Diodes
Armatures

Notes: Additional Wire: Brown Jumper from Choke and Ground
4350 Rpm for 4000
5100 Rpm for 5000 & 6000

Legend:
PUR • PURPLE
GRN • GREEN
YEL • YELLOW
BRN • BROWN
BLU • BLUE
BLK • BLACK
WHT • WHITE
ORG • ORANGE
GRY • GRAY
WHT/BRN • WHITE/BROWN
WHT/BLK • WHITE/BLACK

Important: I am not responsible for loss or damage due to the use or misinterpretation of this diagram!!!

Wiring Diagram
Scale: N/A
Date: 9/30/08
Rev: 10/14/08

Cable Measuring Formula
Add 5' to distance from mounting point to the rear corner of the boat.

Notes: Additional Wire: Brown Jumper from Choke and Ground
4350 Rpm for 4000
5100 Rpm for 5000 & 6000

Legend:
PUR • PURPLE
GRN • GREEN
YEL • YELLOW
BRN • BROWN
BLU • BLUE
BLK • BLACK
WHT • WHITE
ORG • ORANGE
GRY • GRAY
WHT/BRN • WHITE/BROWN
WHT/BLK • WHITE/BLACK

Important: I am not responsible for loss or damage due to the use or misinterpretation of this diagram!!!

Wiring Diagram
Scale: N/A
Date: 9/30/08
Rev: 10/14/08

Trim Actuator
Electric Clutch
Oil Pet Switch

Remote Control Panel
Rev. Limiter
Trim Switch
15A Breaker
15A Breaker
Clutch Switch
Starter Solenoid
STARTER
Regulator/Rectifier
Battery Switch
12V Battery
Alternator
Sparkplugs
Diodes
Armatures

Notes: Additional Wire: Brown Jumper from Choke and Ground
4350 Rpm for 4000
5100 Rpm for 5000 & 6000

Legend:
PUR • PURPLE
GRN • GREEN
YEL • YELLOW
BRN • BROWN
BLU • BLUE
BLK • BLACK
WHT • WHITE
ORG • ORANGE
GRY • GRAY
WHT/BRN • WHITE/BROWN
WHT/BLK • WHITE/BLACK

Important: I am not responsible for loss or damage due to the use or misinterpretation of this diagram!!!

Wiring Diagram
Scale: N/A
Date: 9/30/08
Rev: 10/14/08